Digital fotoram

BRUKSANVISNING

DMTECH

DPF702MC and DPF701

SD

Multimediakort

JPEG-SPELARE

Inledning

Försiktighetsåtgärder och underhåll

- Endast för inomhusbruk.
- Undvik risken för brandeller stötar genom attskydda apparaten från fukt.
  Undvik överhettning genom attaldrig täcka för ventilationsöppningarnabak på fotoramen.
  Utsätt inte den digitalafotoramen för solljus. Direktsolljus kan skada apparaten.
  För att ta utminneskorten används alltid utmatningsknapparna(eject) vid kortfacken.
  Plocka inte isär fotoramen.Risk för elstötar föreliggeroch det finns ingadelar i apparaten somgår att reparera. Garantin för dendigitala fotoramen gäller inteom apparaten plockas isär.
  Använd inte fotoramen omdet föreligger risk föratt kondens uppstår eftersomapparaten kan ta skada.

Rengöra LCD-skärmen

- Var försiktigmed skärmen. Skärmen ärgjord av glas ochkan lätt repas ellergå sönder.

- Fingeravtryck eller damm påLCD-skärmen torkas bort meden mjuk trasa utanslipeffekt, som t.ex. en kameralinsduk.
- Rengöringsvätska som återfinns irengöringskit för LCD-skärmar skallinte appliceras direkt påskärmen. Fukta trasan med rengöringsvätskanoch torka av skärmen.

VARNING:
Apparaten skall vara iSTOPP-läge innan ettkort eller enUSB-enhet sätts i ellertas ur.
Det finns annars riskför att kortet/USB-enhetenoch apparaten tarskada.
Undvik risken förbrand eller stötargenom att skydda apparatenfrån regn ochfukt.

Innehåll

Försiktighetsåtgärder och underhåll — 1
Rengöra LCD-skärmen — 1
Viktiga säkerhetsanvisningar — 3
Kompatibla tillbehör — 4
Fjärrkontrollens knappar — 5
Sätta i och bytabatteri i fjärrkontrollen — 6
Översikt — 7
Komma igång — 8
Välja minneskort — 9
Visa bildfil — 9
Inställningar — 10
Kalender — 11
Felsökningsschema — 12
Tekniska specifikationer — 13

Viktiga säkerhetsanvisningar

- Läs de här instruktionernanoggrant.
- Spara instruktionerna om duskulle behöva dem igen.
- Respektera samtliga varningar.
- Följ alla instruktioner.
- Använd inte apparaten inärheten av vatten.
- Rengör endast med entorr trasa.
- Blockera inte ventilationsöppningar.Installera apparaten i enlighetmed tillverkarens instruktioner.
- Installera inte apparaten inärheten av värmekällor såsomt.ex. element, värmefläktar,spis, förstärkare eller andra apparater somgenererar värme.
- Anslut inte polbunden ellerjordad stickpropp på felaktigtsätt. På en polbundenstickpropp är det ena stiftet bredare än detandra. En jordad stickproppär försedd med tvåstift och en jordning.Jordningen är en säkerhetsanordning. Omstickproppen inte passar ivägguttaget bör du kontaktaen elektriker som kan byta kontakten.
- Trampa inte påsladden, och vik deninte vid vägguttag, förlängningsanslutningeller vid utgången frånapparaten.
- Använd endast tillbehör somär godkända av tillverkaren.
- Ta urstickproppen ur vägguttaget vidåska och när apparateninte skall användas underen längre tid.
- Låt kvalificerad personal skötaall service. Service behövsom apparaten skadas, t.ex.Om strömförsörjningssladden eller stickproppen skadats,eller om apparaten utsattsför vätska, t.ex. Regn eller fukt, inte fungerarkorrekt eller har tappats.
- Apparaten får inte utsättasför vattendropp eller vattenstänk.Placera inte blomvaser ellerandra kärl med vatten eller annanvätska på apparaten.

Den här symbolenpå produkten betyderatt förbrukad elektrisk ochelektronisk utrustning inte skall kastas bland vanligthushållsavfall. Inom EU finnsolika system föråtervinning. Kontakta myndigheten där dubor eller återförsäljarenför information.

Kompatibla tillbehör

Sätta i minneskort
Denna digitala fotoram ärkompatibel med följande minneskort:

Secure Digital Card (SD)
Multimedia Card (MMC)
USB-enhet

Sätt i minneskortet medskärmen och kortfacken vändamot dig. Tvingainte in kortet ikortfacket.
Om minneskortet inte enkeltgår att sätta ikan du ha väntdet åt fel håll.



Fjärrkontrollens knappar

1. UPPÅTPIL(▲): Flyttar markören uppåt.

2. KNAPPEN SETUP: Öppnar inställningsmenyn.

3. KNAPPEN ENTER: Bekräftar ett val.

4. VÄNSTERPIL(◀): Flyttar markören åt vänster.

5. KNAPPEN EXIT: Tryck på EXIT för att återgå till senaste gränssnitt.

6. NERÅTPIL(▼): Flyttar markören neråt.

7. KNAPPEN ZOOM: Zoomar bilden. För varjetryckning ändras förstoringen. används föratt välja flera filer samtidigt.

8. KNAPPEN ROTERA: Roterar bilden 90 gradermedurs.

9. KNAPPEN SLIDE SHOW: Visar bilderna automatiskt.

10. HÖGERPIL(▶): Flyttar markören åt höger.

11. KNAPPEN POWER(⏻): Stänger av/slår på spelaren.

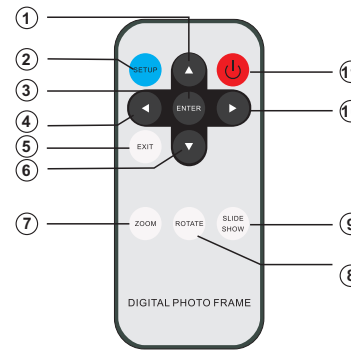

Sätta i och byta batteri i fjärrkontrollen

1

1. Vänd fjärrkontrollen med baksidan uppåt och dra ut batteriskivan.

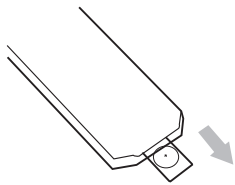

3

3. Stäng batteriskivan.

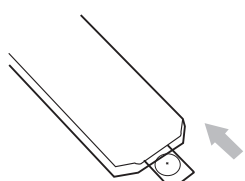

2

2. Lägg i batterier.

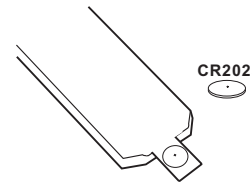

Lägg dem rättvända enligt polaritetsmärkningen (+ och).

1. Lägg i batteriet enligt polaritetsmärkningen (+ och).
2. Batteriet får inte utsättas för värme/eld eller kortslutas.
3. Låt inte gamla batterier ligga kvar i fjärrkontrollen.
4. Ta ur batteriet om du inte använder fjärrkontrollen under en längre tid.
5. Om fjärrkontrollen inte fungerar som den skall eller om avståndet till sensorn måsteminskas är det dags att byta batteri.

Obs!

1. Rikta fjärrkontrollen mot fjärrsensorn på fotoramen.
2. Låt inte fjärrkontrollen ligga på en extremt varm eller fuktig plats.
3. Spill inte vatten och ställ inte våta föremål på fjärrkontrollen.
4. Batterierna har under normala förhållanden en livslängd på ett år.

Översikt

Knappar och funktioner:

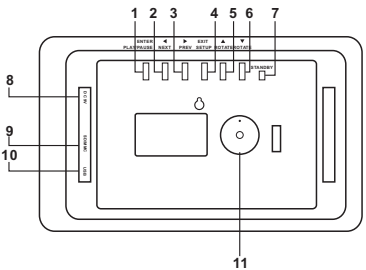

1. **KNAPPEN ENTER/PLAY/PAUSE:** Bekräftar ditt val och spelar upp ellerpausar.

2. **HÖGERPIL(◀ / NEXT):** Flyttar markören åt höger och visar nästa bild.

3. **VÄNSTERPIL(▶ / PREV):** Flyttar markören åt vänster och visar föregående bild.

4. **KNAPPEN EXIT/SETUP:** Tryck på EXIT för att återgå till senaste gränssnitt. Används för inställningar. Lång tryckning (minst 2 sekunder) utför ett kommando.

5. **UPPÅTPIL(▲ /ROTATE):** Flyttar markören och roterar 90 grader motsols.

6. **NERÅTPIL(▼ / ROTATE):** Flyttar markören och roterar 90 grader medsols.

7. **KNAPPEN STANDBY:** Slår på/stänger av spelaren.

8. **DC 5V:** Uttag för adaptern.

9. **SD/MMC-KORT:** Anslutning för SD- eller MMC-minneskort.

10. **USB:** Anslutning för USB-enhet.

11. **Fäste för hållare.**

Komma igång

Komma igång

1. Sätt hållaren ifästet och ställ uppramen. Sätt i adapterni uttaget bak påramen och sedan iett vägguttag. På skärmen visas följande: visar automatiskt sparade bilder. Om ett SD/MMC-kortsitter i spelaren visas bildernapå kortet.

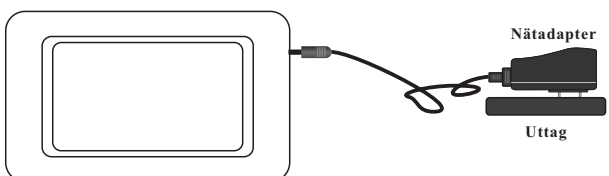

Välja minneskort

När fotoramen slås på går den automatiskt till visningsläget bildspel om ett minneskort är anslutet eller om det finns bilder i det inbyggda flash-minnet.
Tryck på EXIT för att återgå till bildmenyn (Fig 1).

Om inget minneskort är anslutet eller om inga bilder finns i flash-minnet öppnas bildmenyn. När ett minneskort ansluts går fotoramen till ett läge där man kan välja minneskort (Fig 2).

Fig 1

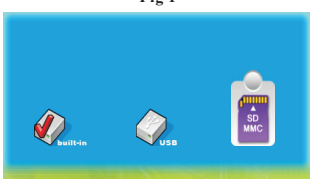

Fig 2

Visa bildfil

När minneskortet ansluts går fotoramen till ett läge där man kan välja kort.

Gör så här:

I läget Select Cards markeras ett minneskort med knapparna ◀ och ▶ . Tryck på ENTER när du valt ett kort för att visa bildspel eller gå till Photo mode för att visa bilder (Fig 3).
Tryck på EXIT för att återgå.

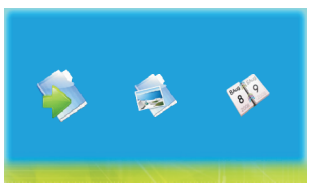

Fig 3

Inställningar

Gör så här:
Tryck på SETUP för att öppna inställningsmenyn (**Fig 4**).

Tryck på ▲▼ för att välja inställningsalternativ.
Tryck på ENTER för att ändra inställningen.

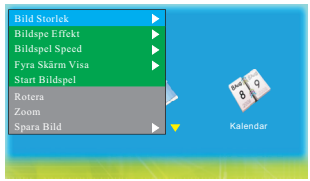

Fig 4

1. Upplösning
Här kan du väljahur bilderna ska visasi fotoramen.
Välj mellan AutoFit, Optimal eller Full.

2. Bildspelseffekter
Här kan du väljaeffekter när en ny bild visas i ett bildspel.
Välj mellan 8 alternativ: Slumpmässigt, Sammanfogning, Kluvna, Jalousie, Nära Ladugårddörrar, öppna, Ladugårddörrar, Utstrålning, Omge.

3. Bildspelsintervall
Här väljer du hastighet för bildbyte i bildspelet.
Intervallen kan ändras från 0 sekunder upp till 1 minut.
Tryck på ▲▼ för att ändra inställningen.

4. Fyra Skärm Visa
Här kan du sättapå och stänga av funktionen där fyra Skärm Visa.

5. Starta bildspel
Här startar du visningen av ett bildspel.

6. Rotera
Rotera bilder 90 gradermedsols.
(Används när bilden visas på fullskärm)

7. Zooma
Här kan du zoomain och ut i bilderna.
(Används när bilden visas på fullskärm)

8. Spara bild
Här kan du kopierabilder från minneskortet till det inbyggda flash-minnet.
(Används när bilden visas på fullskärm)

9. Radera en fil
Här kan du raderabilder från det inbyggda flash-minnet.
(Fotomeny: använd knappen ZOOM för att välja flera filer samtidigt)

10. Återställ inställningar
Här kan du återgå till standardinställningarna.

11. Språk
Här kan du väljaett av 2 språk: Engelska, Svensk.

Inställningar

12. Ljusstyrka
Här ställer du in ljusstyrkan på LCD-skärmen.

13. Kontrast
Här ställer du in kontrasten på LCD-skärmen.

14. Färg
Här ändrar du färger på LCD-skärmen.

15. Färgton
Här ställer du in färgton på LCD-skärmen.

16. Tid
Här ställer du in systemets klocktid.

Kalender

Fig 5

Här ställer du in datum och klocka (**Fig 5**).

Användning

Tryck på ◀ ▶ och välj sedan Calendar i läget Select Mode. Tryck på ENTER för att öppna kalenderinställningarna. I kalendern visas dagens datum och klockslag, och du kan använda pilknapparna för att visa olika år, månader och dagar.

Felsökningsschema

Läs i första hand i felsökningsschemat nedan och i övriga bruksanvisningen om du har problem med fotoramen.
Om problemet kvarstår, så kontakta teknisk support.

Apparaten strömlös:
Kontrollera att apparaten är strömförsörjd och att nätsladden är korrekt ansluten.

Skärmen är för ljus eller för mörk:
Justera ljusstyrka och kontrast i inställningsmenyn.

Det går inte att läsa minneskortet:
Kontrollera att det finns data lagrat på kortet.

Det går inte att visa filen:
Kontrollera att filformatet stöds av fotoramen.

Färgen är för ljus eller svartvit:
Justera färgen i inställningarna.

Bilden visas inte på fullskärm:
Kontrollera inställningarna för bildyta.

Tekniska specifikationer

Skärm: 7-tums TFT LCD 480(RGB)x234

Effekt: nätadapter; In 100240 V~; Ut 5 V, 1,5 A

Inbyggt minne: 16MB NOR-Flash (fulla kapaciteten kan inte användas för bildlagring då delar av kapaciteten upptas av mjukvaran)

Användningsmiljö
- **Drifttemperatur: 0~60 grader**
- **Förvaringstemperatur: -10~70 grader**

Tillbehör:
- **Nätadapter**
- **Bruksanvisning**
- **Fjärrkontroll**

Specifikationer och anvisningar kan ändras utan föregående meddelande.

Introduction

Precautions and Maintenance

- For indoor use only
- To avoid risk of fire or electric shock, do not expose this appliance to moisture.
  To avoid overheating, do not block the ventilation holes on the back of this digital photo frame at any time.
  Keep this Multimedia Digital Photo Frame out of sunlight. Direct sunlight may cause damage.
  Always use the eject buttons on the memory storage card slots to remove the memory storage cards.
  Do not dismantle the Multimedia Digital Photo Frame. There is a risk of electric shock, and there are no user serviceable parts inside. Dismantling your Multimedia Digital Photo Frame will void your warranty.
  Do not use the Multimedia Digital Photo Frame if conditions could allow condensation to occur, or damage may result.

Cleaning the LCD Screen

- Treat the screen gently. The screen on the multimedia Digital Photo Frame is made of glass and can be easily scratched or broken.
- If fingerprints or dust accumulates on the LCD screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth to clean the LCD screen.
- If you use the LCD cleaning Kit sold at various retail outlets, do not apply the cleaning liquid directly to the LCD screen. Moisten the cleaning cloth with the cleaning solution and apply the cloth to the screen.

WARNING:
Please STOP the unit before inserting or removing a card or USB Drive. Failure to do so may cause damage to the card/USB and the unit. To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

Table of contents

Precautions and maintenance ——— 1
Cleaning the LCD Screen ——— 1
Important Safety Precautions ——— 3
Resource ——— 4
Remote Controller Function Buttons ——— 5
Installing and replacing the Remote Control Battery ——— 6
Player Overview ——— 7
Getting Started ——— 8
Memory Card Choice ——— 9
Play Photo File ——— 9
Setup ——— 10
Calender ——— 11
Troubleshooting Guide ——— 12
Specifications ——— 13

Important Safety Precautions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinch particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightening storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged. Liquid has been exposed to rain or moisture, does not operate normally or has been dropped.
- This appliance shall not be exposed to dripping or splashing water and that no object filled with liquid such as vases shall be placed on the apparatus.

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

Resource

Inserting Memory Cards
Your multimedia DPF is compatible with the following memory cards:

Secure Digital Card (SD)
Multimedia Card (MMC)
USB drive

Insert the memory card with the screen and slots all facing yourself. Do not force the card in the slot.
If you are not able to easily insert the memory card completely, you may have inserted it in a wrong way.

Note: DPF = Digital Photo Frame



Remote Controller Function Buttons

1. **UP BUTTON(▲):** Up cursor selection function.

2. **SETUP BUTTON:** Used to enter the photo frame setup options.

3. **ENTER BUTTON:** Used to confirm your current.

4. **LEFT SHIFT BUTTON(◀):** Left cursor selecting function.

5. **EXIT BUTTON:** Press EXIT key to return into last interface.

6. **DOWN BUTTON(▼):** Down cursor selection function.

7. **ZOOM BUTTON:** Used to zoom into the image. Each press advances the zoom one seetting at a time. Used to select multiple files in photo menu.

8. **ROTATE BUTTON:** Picture rotate 90° clockwise.

9. **SLIDE SHOW BUTTON:** Browse picture automatically.

10. **RIGHT SHIFT BUTTON(▶):** Right cursor selecting function.

11. **POWER BUTTON(⏻):** This is used to turn ON/OFF the player.

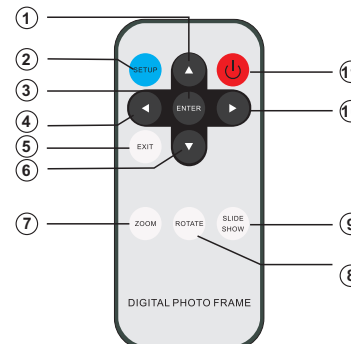

Installing and replacing the Remote Control Battery

1

1. Rotate the remote control so it is face down and pop out the battery tray.

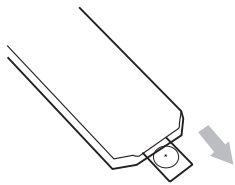

3

3. Close the battery tray.

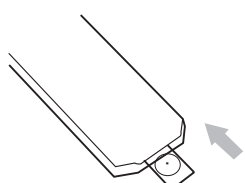

2

2. Insert the batteries.

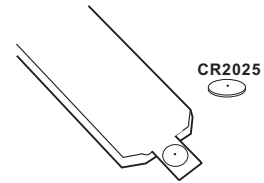

Insert the batteries according to the correct (+)(-) polarity.

1. Insert the battery matching the correct polarity.
2. Do not expose the battery to heat/fire and do not Short-circuit the battery.
3. Do not leave dead batteries in the remote control.
4. If you do not use the remote control for a long period of time, remove the battery.
5. If the remote control does not function correctly or the operating range becomes reduced, replace the battery.

Note:

1. Point the remote control directly at the digital frame remote sensor.
2. Do not leave the remote control in an extremely hot or humid place.
3. Do not spill water or put anything wet on the remote control.
4. Battery life is 1 year under normal operating conditions.

Player Overview

Key control and Key functions:

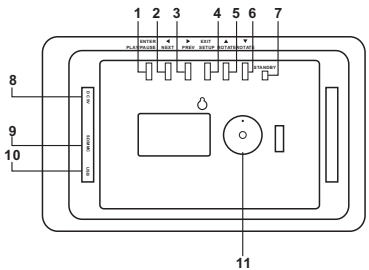

1. **ENTER(PLAY/PAUSE) BUTTON:** Confirm that what you choosed and Pause or Play.

2. **RIGHT SHIFT BUTTON(◀ / NEXT):** Right cursor selecting function and next photo.

3. **LEFT SHIFT BUTTON(▶/ PREV):** Left cursor selecting function and previous photo.

4. **EXIT/SETUP BUTTON:** Press EXIT key to return into last interface. Use for setup programs, then by pressing long (above 2 seconds) enter to execute the command.

5. **UP BUTTON(▲ /ROTATE):** Functional selection button and Rotate 90 degrees counter-clockwise.

6. **DOWN BUTTON(▼ / ROTATE):** Functional selection button and Rotate 90 degrees clockwise.

7. **STANDBY BUTTON:** Ture ON/OFF the player.

8. **DC 5V:** Input the DC power adapter to the DPF Player.

9. **SD/MMC CARD:** The slot for DPF player to connect the SD or MMC memory card.

10. **USB:** Connect the USB disk.

11. **Bracket jack.**

Getting started

Getting started

1. Assemble the Multimedia Digital photo Frame bracket to prop the unit up insert adaptor DC plug into the DPF player first, then plug the power cord to a standard wall outlet.
Then the screen will display as below: (will play the pictures auto matically stored), If insert the SD/MMC card, then will play the pictures in the card.

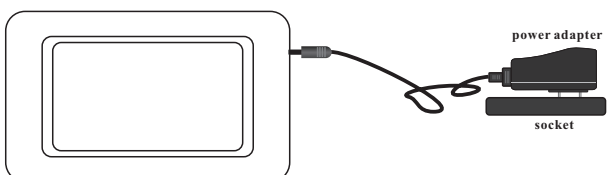

Memory Card Choice

When power on, the digital frame will go into automatic show mode of SlideShow if it is inserted with memory Cards or keeps pictures in the built-in flash.
Press EXIT key to return to Photo menu (Fig1).

If the digital frame is not inserted with memory cards or there is no pictures in its built-in flash, then it goes into Photo menu. After memory card inserted, it goes into Select Cards mode (Fig 2).

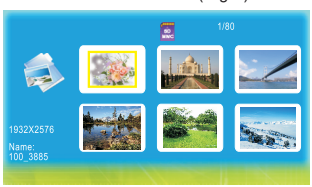

Fig 1

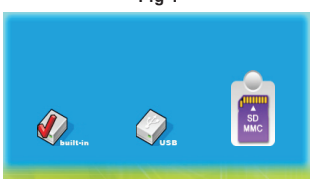

Fig 2

Play Photo File

After memory card inserted, the digital frame goes into Select Cards mode.

Operation:

In Select Cards mode, you can choose different memory cards by ◀ or ▶ key. Press ENTER key after choosing the memory card to go into SlideShow or Photo mode to play pictures (Fig 3). Press EXIT you can return from playing status.

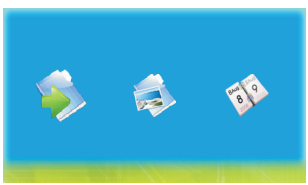

Fig 3

Setup

Operation:
In any menu, press SETUP key to go into the SETUP interface (**Fig 4**).
Press ▲▼ key to choose the set item.
Use the ENTER button to change the setting.

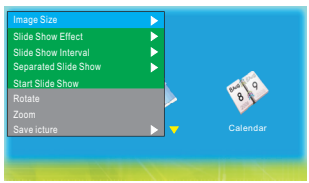

Fig 4

1. Image Size
Allows user change how the images are displayed on the photo frame. Choose between, Auto Fit, Optimal or Full.

2. Slide Show Effect
Allows user to set different effects to the slides when the images change. There are 8 options you can choose from Random, Split Horizontal in, Split Horizontal out, Jalousie, Split Vertical in, Split Vertical out, Radiation, Surround.

3. Slide Show Interval
Allows user to change the speed of the slideshow. The interval speed can be changed from 0 seconds to 1 minute. Use the ▲▼ button to change the setting.

4. Separated Slide Show
Allows user to change the Separated Slide Show from On to Off.

5. Start Slide Show
Allows user to choose the start slide show.

6. Rotate
Rotate Photos 90 degrees Clockwise.
(Be effective when preview pictures on full screen)

7. Zoom
Allows user to zoom in and out on files.
(Be effective when preview pictures on full screen)

8. Save Picture
Allow user to copy pictures from memory cards into the built-in flash.
(Be effective when preview pictures on full screen)

9. Delete File
Allow user to delete pictures from the built-in flash.
(Be effective in Photo menu, use Zoom button to select multiple files in Photo menu.)

10. Reset Setting
Allows user to the restore default settings.

11. Language
Choose between 2 different languages: English, Swedish.

Setup

12. Brightness
Allows you to change the brightness of the LCD screen.

13. Contrast
Allows you to change the contrast of the LCD screen.

14. Color
Allows you to change the color of the LCD screen.

15. Tint
Allows you to change the tint of the LCD screen.

16. Time
This function allows the user to se the system time.

Calendar

Fig 5

Allow user to setup date and time of the system (**Fig 5**).

Operation:
Press ◀ ▶ key to choose Calendar in Select Mode,
Press ENTER key to go into the calendar interface.
In addition to displaying the current data, the user can the navigation key you can preview different year, Month, and day.

Troubleshooting Guide

If you are experiencing problems with your DPF, please consult both this guide and manual. If you need further assistance, please contact Technical Support.

No power:
Please check whether there is power, and that the DC power cord is plugged in correctly.

Display too bright or too dark:
please adjust the brightness or contrast in the setup menu.

Can not read the CARD:
Please check that there is content on the card.

Can not play the file:
Please confirm whether the file format can be played the player.

The color is light or no color:
Please adjust the color setup.

Specifications

Display: 7″ TFT LCD 480(RGB)x234

Power: AC Adapter; Input 100-240V~; Output 5V, 1.5A

Built-in Memory: 16MB NOR-Flash (not full capacity can be used for photo storage, subject to the sharing of internal software)

Environmental operating ranges
- **Operating Temperature: 0~60 degrees**
- **Storage Temperature: -10~70 degrees**

Accessories:
- **Power Adapter**
- **User Manual**
- **Remote Control**

All specifications and instructions are subjeat to change without Notice.

75-7HI1018DYR1-01R